



PATIO FRAME ASSEMBLY INSTRUCTIONS

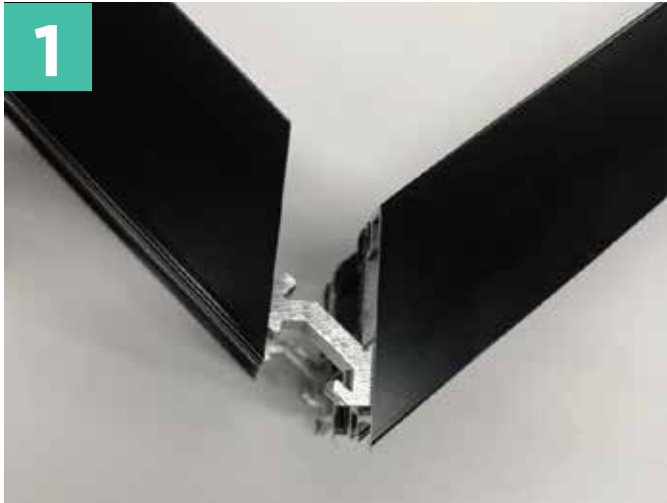

Connect the frame corners as shown making sure you seal the joint with silicone or small gap filler. The corner cleats will already be fitted to one of the profile.

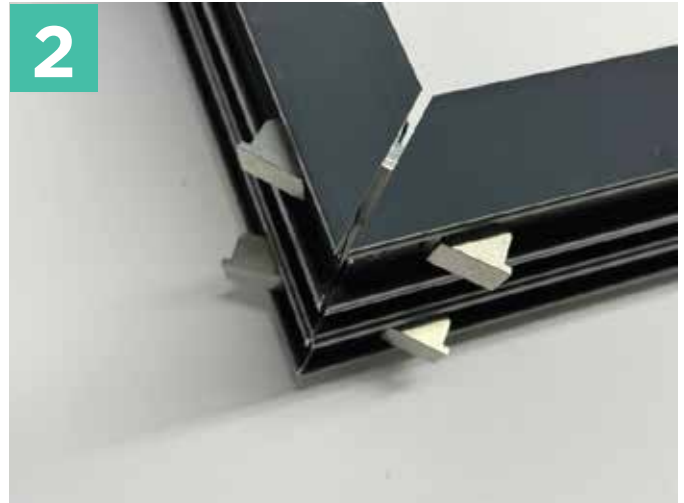

Insert the tension blocks into the punch out hole making sure the screw is facing towards the corner.



Use a 2.5mm allen key to tighten the joint making sure the top and bottom profile surfaces are level with each other.



Wipe off any excess silicone and clean the joint.

Tel: 01142 313 133

Cuthbert Bank Road, Sheffield, South Yorkshire, S6 2HP

www.bifoldnetwork.com